

CamCube CC

HANDLING AND MAINTENANCE INSTRUCTION



INSTRUCTIONS FOR:

CamCube CC

HANDLING INSTRUCTIONS

- When the housing is moved or transported, the service door must be closed
- Vipe the housing with water or a mild detergent when needed

INSTALLATION INSTRUCTIONS

- Be aware of the airflow direction when installing the housing
- Adjustable feet are delivered with the housing, mounted on site
- Minimum 1 meter is needed for filter change

NOTE: Designed for indoor use

INSTALLATION OF NEW FILTER

- Open the service door. Inspect the gasket, if damaged replace the service door
- Install the CamCarb cylinders by placing the pins in the slots of the mounting frame

- Turn the cylinders counterclockwise until stop
- Repeat until all cylinders are mounted
- Tighten the cylinder by using a socket wrench (24mm)
- Close the service door
- Close the hinges to seal the housing

BEFORE FILTER CHANGE

- Camfil recommends protective equipment like overalls, gloves and face masks when changing filters
- Always check local regulations before changing filters

FILTER CHANGE

- Shut down the ventilation system
- Open the service door. Inspect the gasket, if damaged replace the service door
- Turn the cylinder clockwise, lift the cylinder slightly and pull it straight backward
- See instructions for Installation of new filter



Examples of appropriate filter types for CamCube CC





Pressure-relieving hinges; designed to avoid shearing damage to the service door gasket