

CamCube HF-CC HANDLING AND MAINTENANCE INSTRUCTION



HANDLING INSTRUCTIONS

- When the housing is moved or transported, the service door must be closed
- Vipe the housing with water or a mild detergent when needed

INSTALLATION INSTRUCTIONS

- Be aware of the airflow direction when installing the housing
- Adjustable feet are delivered with the housing, • mounted on site
- Minimum 1 meter free space in front of the service door is needed for filter change

NOTE: Designed for indoor use

INSTALLATION OF NEW FILTER

- Open the service door. Inspect the gasket, if damaged replace the service door
- Install the CamCarb cylinders by placing the pins in the slots of the mounting frame
- Turn the cylinders counterclockwise until stop
- Repeat until all cylinders are mounted •
- Tighten the cylinder by using a socket wrench (24mm)
- Carefully place the filter in the rail and clamp it with the • levers. When installing bag filters, make sure the pockets are in upright position and have not been pinched before clamping
- Close the service door
- Close the hinges to seal the housing

CamCube HF-CC

INSTRUCTIONS FOR:

BEFORE FILTER CHANGE

- Camfil recommends protective equipment like over-• alls, gloves and face masks when changing filters
- Always check local regulations before changing • filters

FILTER CHANGE

- Shut down the ventilation system •
- Open the service door. Inspect the gasket, • if damaged replace the service door
- Untighten the filter clamping with the levers and remove the filter
- Turn the cylinder clockwise, lift the cylinder slightly and pull it straight backward
- See instructions for Installation of new filter





Pressure-relieving hinges;

designed to avoid shearing damage to the service door gasket